

**Manual for the nexgentec DALI Line driver
framework
Version 1.00.006**

Table of Content

| | | |
|----|---|---|
| 1 | Whats in the box?..... | 3 |
| 2 | What is it doing?..... | 3 |
| 3 | What functionality have the "devices" drivers ?..... | 3 |
| 4 | What DALI actors are supported and which driver in need therefore?..... | 3 |
| 5 | How is it working?..... | 3 |
| 6 | How many devices can it handle?..... | 3 |
| 7 | How is it licensed?..... | 3 |
| 8 | Who does provide support?..... | 3 |
| 9 | Where can I ask for device drivers?..... | 3 |
| 10 | Configuring the DALI bus using the manufacturers software..... | 4 |
| 11 | Wiring up the the DALI interface | 5 |
| 12 | Setup the DALI interface in Composer..... | 6 |
| 13 | Adding a light | 7 |
| | 13.1 Driver Properties..... | 7 |
| 14 | Finishing your installation..... | 8 |
| 15 | Troubleshooting..... | 8 |

1 Whats in the box?

Included in one set of the framework are:

- One license key
- Software drivers
- nexgentec DALI interface (If ordered)

2 What is it doing?

- It connects DALI/DSI system to Control4.
- It provides seamless feedback to Control4 from the DALI bus devices

3 What functionality have the "devices" drivers ?

A full description of the functionality is provided in the devices section of this document

4 What DALI actors are supported and which driver in need therefore?

All DALI actors are supported. They all communicate with data packets (0-254) on the single address range of 0-63 and group address 0-15

5 How is it working?

The framework contains 2 parts. The first part is the controller driver. This driver connects all device drivers that are added in the rooms together and communicates with the DALI Processor.

6 How many devices can it handle?

The architecture allows you to connect unlimited devices to each controller driver. Controller drivers can be added as many as needed, the only limitation is the CPU power of the Control4 controller itself. A HC- 800 is always a good choice

7 How is it licensed?

The framework is will license itself automatically when the nexgentec DALI Processor is used, no license key must be applied.

If a original DALI-RESI-ASCII Processor is used a key must be inserted to avoid a nonworking system. It will only work for the Control 4 controller specified

- More info about licensing/ key change is available in the Driver Dashboard at technet.genesis-technologies.ch

8 Who does provide support?

Contact nexgentec.eu:
info@nexgentec.eu

Before you call or email support, make sure your system has a 4sight account that is active and tested. Supply always the credentials for login.

9 Where can I ask for device drivers?


- Driver inquiries can be sent to info@nexgentec.eu
- In order to integrate it into the framework the actor must be sent to nexgentec
- A estimates of costs will be provided before the integration starts

10 Configuring the DALI bus using the manufacturers software


Skip this step if the DALI bus addressing is already done.

Download the software from the drivers page on technet.genesis-technologies.ch.


You need to connect the Interface to the PC, see the next chapter for the pin out of the serial connection. After installation and start of the software the main window is showing up. Select on the left to side the DALI-RESI-ASCII module

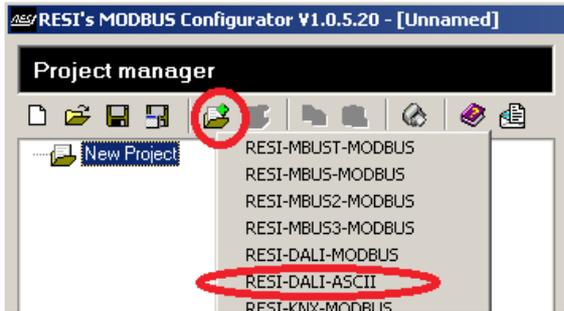

Connect via network or Serial, test the connection to verify.

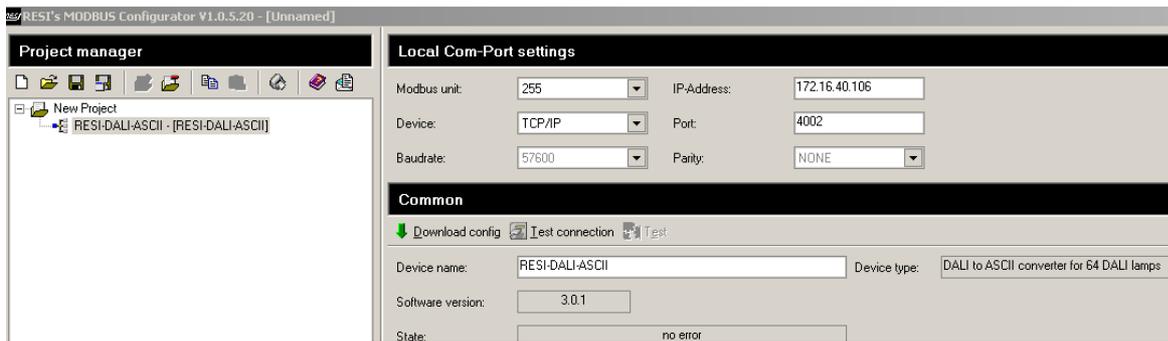


Configure the DALI bus

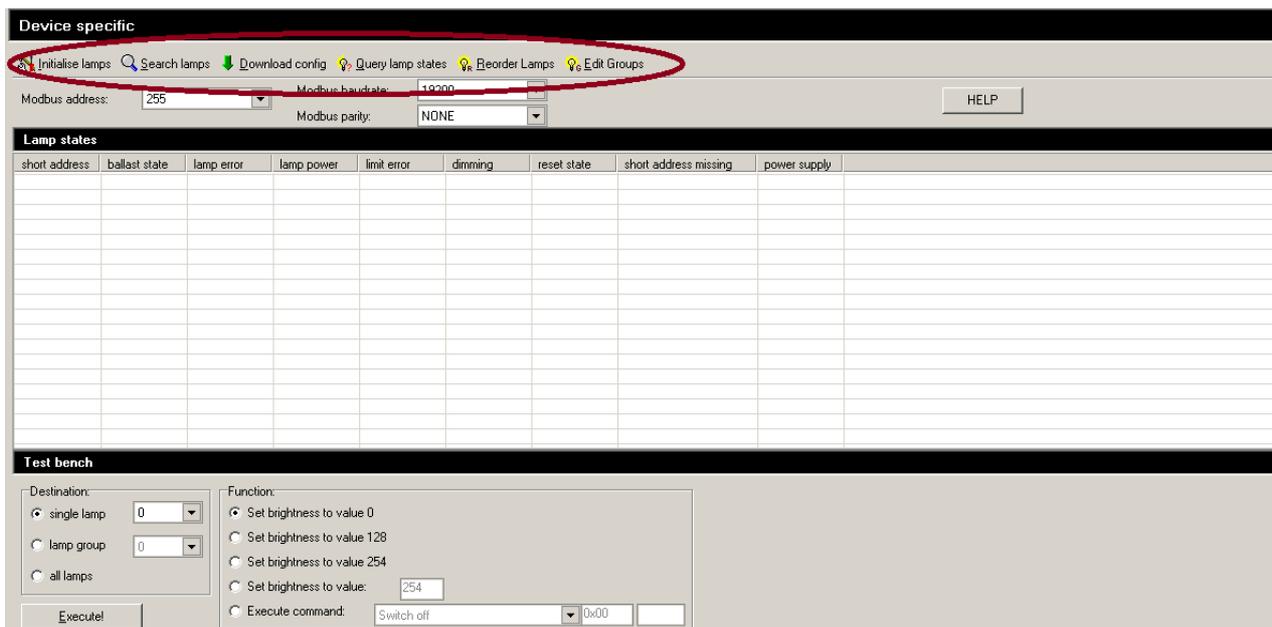

11 Wiring up the the DALI interface

Per default the DALI Interface connects via RS232 to the Control4 Controller
Wiring setup:

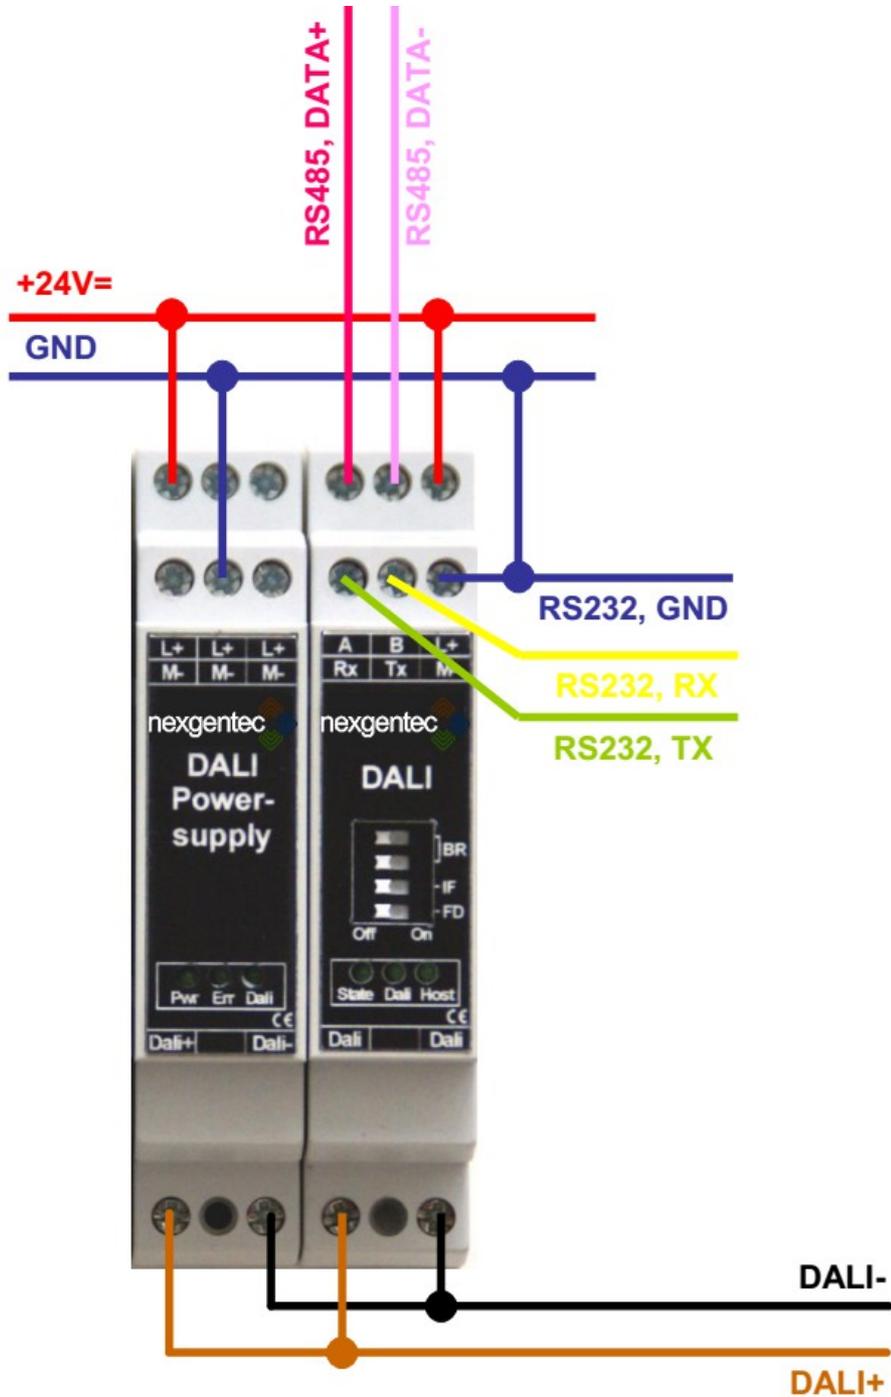

Additionally the driver supports the connection over a Serial<->TCP module like the Moxa Nport 5210 or USR-TCP232-200 module
The setup from this modules is not described in this manual. They must be configured as transparent TCP server.

12 Setup the DALI interface in Composer

In Composer add the controller driver to the project



Items

Locations | Discovered | My Drivers | Search

dali

Local Online Certified Only

All Device Types | Dali


Results Sort by: Relevance

| | |
|--------------------------|---------------------|
| Dali network | |
| Dali | NGTSLCO4DLI01NW |
| others | Serial Local |
| Dali Light Switch | |
| Dali | NGTSLCO4DLI01SW |
| Light (v2) | Other Local |
| Dali Light Dimmer | |
| Dali | NGTSLCO4DLI01LD |
| Light (v2) | Other Local |

Connect the RS232 in Connections

| Name | Type | Connection | Input/Output | Connected To |
|------------------------|---------|-------------|--------------|---|
| Control Inputs | | | | |
| Serial RS-232 | Control | RS_232 | Input | Master HC800->SERIAL 2 |
| Control Outputs | | | | |
| Dali Control | Control | DALI_DEVICE | Output | Load 17->Dali Control, Group 0->Dali Control, Load 6... |

Back in System Design click on the controller driver, enter the provided product key and press "Set"

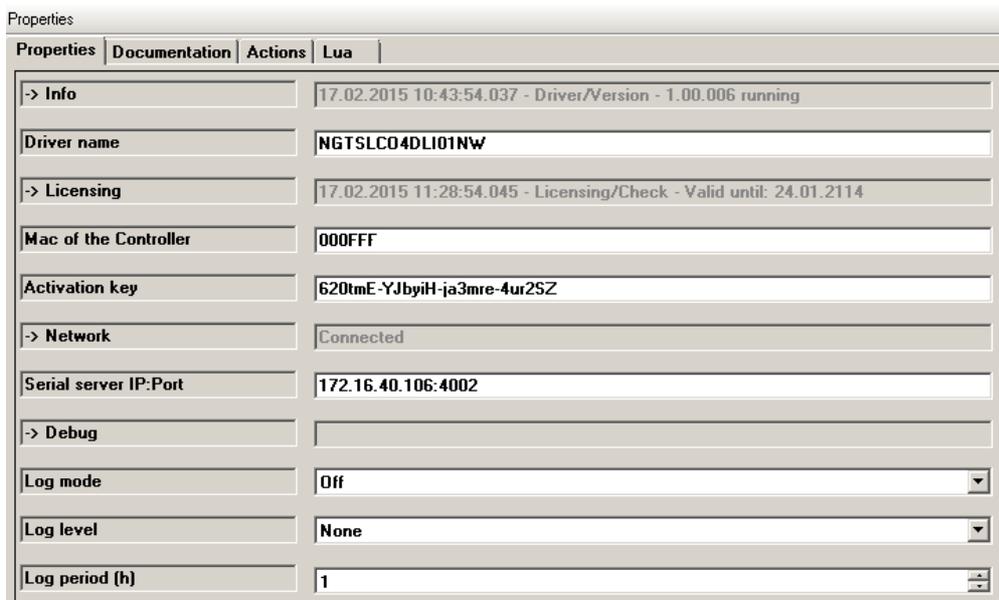

Properties

Properties | Documentation | Actions | Lua

-> Info 17.02.2015 10:43:54.037 - Driver/Version - 1.00.006 running

Driver name NGTSLCO4DLI01NW

-> Licensing 17.02.2015 11:28:54.045 - Licensing/Check - Valid until: 24.01.2114

Mac of the Controller 000FFF

Activation key 620tmE-YJbyiH-ja3mre-4ur2SZ

-> Network Connected

Serial server IP:Port 172.16.40.106:4002

-> Debug

Log mode Off


Log level None

Log period (h) 1

The activation is successful when the expiry date is displayed

13 Adding a light

In Composer add a switch or dimmer driver to the project.

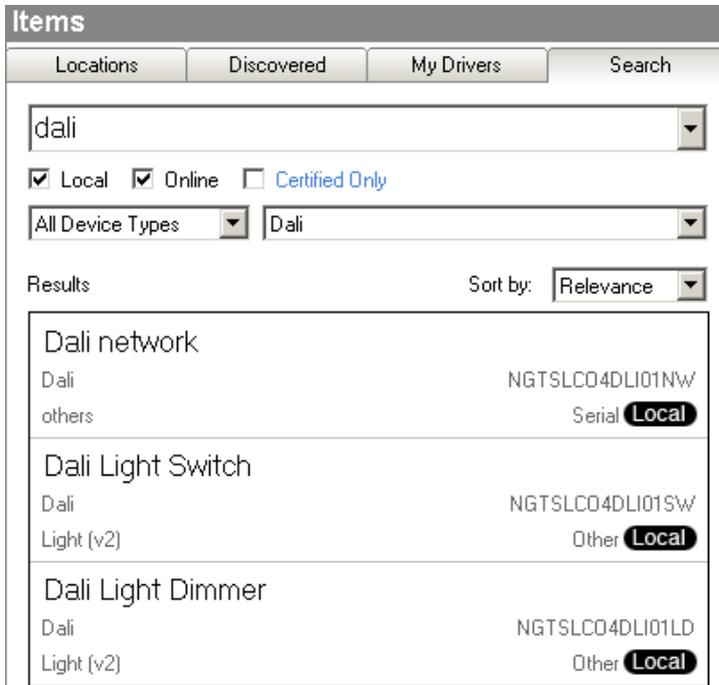


| Items | | | |
|--|------------|--------------------|--------|
| Locations | Discovered | My Drivers | Search |
| dali | | | |
| <input checked="" type="checkbox"/> Local <input checked="" type="checkbox"/> Online <input type="checkbox"/> Certified Only | | | |
| All Device Types | | Dali | |
| Results | | Sort by: Relevance | |
| Dali network | | NGTSLCO4DLI01NW | |
| Dali | Serial | Local | |
| Dali Light Switch | | NGTSLCO4DLI01SW | |
| Dali | Other | Local | |
| Dali Light Dimmer | | NGTSLCO4DLI01LD | |
| Dali | Other | Local | |

In functionality there is no difference as the light behavior is anyhow defined in the DALI configuration itself, in Control4 the difference will be that one is showing up as dimmer, the other as switch

13.1 Driver Properties

Address type: Select if the driver does control a single light, a group or all lights. Depending on that setting additional properties will show up.

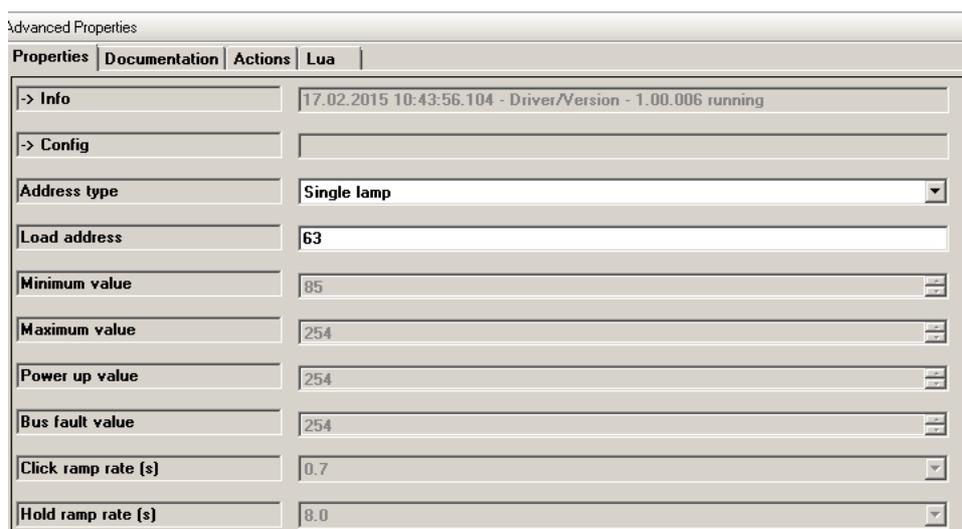

| Advanced Properties | | | |
|---------------------|---|---------|-----|
| Properties | Documentation | Actions | Lua |
| -> Info | 17.02.2015 10:43:56.104 - Driver/Version - 1.00.006 running | | |
| -> Config | | | |
| Address type | Single lamp | | |
| Load address | 63 | | |
| Minimum value | 85 | | |
| Maximum value | 254 | | |
| Power up value | 254 | | |
| Bus fault value | 254 | | |
| Click ramp rate (s) | 0.7 | | |
| Hold ramp rate (s) | 8.0 | | |

Advanced Properties

Properties | Documentation | Actions | Lua

| | |
|-------------------|---|
| -> Info | 17.02.2015 10:43:56.068 - Driver/Version - 1.00.006 running |
| -> Config | |
| Address type | Lamp group |
| Group address | 2 |
| Level report load | 17 |
| Log mode | Off |
| Log level | None |
| Log period (h) | 1 |

Advanced Properties

Properties | Documentation | Actions | Lua

| | |
|-------------------|---|
| -> Info | 17.02.2015 10:43:56.127 - Driver/Version - 1.00.006 running |
| -> Config | |
| Address type | All lamps |
| Level report load | 17 |
| Log mode | Off |
| Log level | None |
| Log period (h) | 1 |

- Load address: Insert the address from the load to control
- Group address: Insert the address from the DALI group to control
- Level report load: If a group or all lamps are controlled a report load can be configured. It will be the "master" load for all level feedback's during operation. On start up the level of this load will be requested.

14 Finishing your installation

When all devices are added a restart can be issued by pressing "Initialize Framework" in the Actions tab of the "DALI network" driver. When the debug mode is activated the LUA window should print out some information about the restart.

Normally no restart is required the driver refresh by itself when a setting was changed

15 Troubleshooting

Issue: Network does not connect. Solution: Disconnect the Serial connection.

Issue: Serial does not connect. Solution: Remove the IP from Properties